

O H M

Live Your Dream

Professional hair results at home

Experience the next generation of hair drying technology – designed for salon-quality results, faster drying and healthier hair every day.

Why You'll Love It

- **Shiny, Healthy Hair** – 4 billion plasma ions tame frizz, lock in moisture and boost shine.
- **Custom Styling** – Multiple heat and airflow settings to suit every hair type.
- **Fast, Gentle Drying** – Smart temperature control protects from heat damage.
- **Intuitive Use** – Grip sensing powers on when you pick it up.
- **Always Informed** – HD display shows settings at a glance.



O H M

Live Your Dream

Professional hair results at home

Advanced Plasma Technology

The OHM hair dryer is powered by 4 billion plasma ions and advanced nano-particle technology that work together to:

- **Neutralise Static & Frizz:** Ions counteract positive charges in dry or damaged hair for a smoother finish.
- **Lock in Moisture:** Nano-sized water particles penetrate deep into the hair shaft to keep it hydrated and shiny.
- **Enhance Shine:** The plasma process flattens and seals the hair cuticle, giving a reflective, salon-like gloss.
- **Protect from Heat Damage:** Works in harmony with Smart Temperature Control to maintain optimal styling conditions.

Key Features at a Glance

- **Multiple Settings:** 3 airspeeds, 5 temperature modes, intelligent power on/off.
- **Smart Temperature Control:** Monitors and adjusts airflow for consistent heat.
- **Unique Grip Sensing:** Automatically detects when you're holding it, saving power when not in use.
- **HD Screen Display:** Clear, colour coded indicators for Cool, Warm, Hot and Circulating modes.
- **11 Safety Protections:** From overheat prevention to voltage regulation.

O H M

Live Your Dream

Professional hair results at home

How to Use

- 1. Choose Airspeed**
 - Press the speed selection key to select the 3 different airspeeds
- 2. Choose Temperature**
 - Press the temperature selection key to select the 5 different temperature settings.
 - Press and hold the temperature key for 3 seconds to enter the thermocycling heat mode.
 - To deactivate the circulating mode press the temperature key once.
- 3. Grip to Activate**
 - To activate the auto grip sensor, with the hair dryer off, hold the power key for 3 seconds. To deactivate press the power key.
- 4. Style With Confidence**
 - Use cool mode for setting styles, warm/hot for drying and circulating mode for even heat distribution.
- 5. Finish with a Shine**
 - The plasma technology works throughout your session to leave hair smooth and static-free.
- 6. Cleaning Function**
 - Press and hold the speed key for 3 seconds to start the self cleaning function. The function will stop automatically when finished.

O H M

Live Your Dream

Professional hair results at home

Warnings

- To prevent electric shock, fire, or personal injury caused by improper use, please read this manual carefully before using the product, and keep it for future reference.
- This appliance is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructed by a responsible person to ensure safe usage.
- Do not allow children to operate or treat this appliance as a toy. Supervision is necessary when it is used around children. Children must not clean or service the appliance without adult supervision.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to avoid hazards.
- Do not immerse the hair dryer or its electrical parts in water or other liquids. If it falls into water, unplug it immediately and do not reuse it.
- Always unplug the appliance after use in bathrooms, as being close to water is still hazardous even when switched off.
- For additional protection, install a Residual Current Device (RCD) with a rated residual operating current not exceeding 30mA. Consult a licensed electrician for installation.
- This product includes a non-self-resetting thermal cut-out to prevent overheating. If it shuts down due to overheating, unplug it and allow it to cool before reuse.

O H M

Live Your Dream

Professional hair results at home

Precautions

- Do not use near water sources such as bathtubs, showers, washbasins, or similar containers.
 - Do not block the air inlet or outlet.
 - Prevent hair from being sucked into the air inlet during use.
 - Do not touch hot surfaces during or immediately after use.
 - Do not operate with wet hands.
 - Always unplug when not in use or during maintenance.
 - Do not twist or tangle the power cord during storage.
 - Keep the power cord away from heat sources or sharp objects.
 - Do not use the dryer in the presence of aerosol (spray) products or flammable substances.
 - Do not use the dryer to dry clothing or other items.
 - Use only with the rated power supply. Do not use universal adapters or voltage converters.
 - If the unit malfunctions, contact the manufacturer—do not attempt disassembly.
 - Children should be aged 8 and above to use this unit.
- WARNING:**
POSSIBLE ELECTRIC SHOCK, DO NOT IMMERSE IN WATER OR USE WHILE BATHING.

 
O H M

Live Your Dream

Professional hair results at home

Product Overview

- ① Full-Colour UI Display
- ② Air Outlet
- ③ Smart Grip Sensor Area
- ④ Detachable air filter cover
- ⑤ Power Button/Grip Sensor Activation Button (Hold for 3 seconds to activate)
- ⑥ Temperature Setting Button/Hot&Cool Circulation Mode (Hold for 3 seconds to activate)
- ⑦ Wind Speed Button/Reverse Air Cleaning Function (Hold for 3 seconds to activate)
- ⑧ Magnetic Detachable Smoothing Nozzle

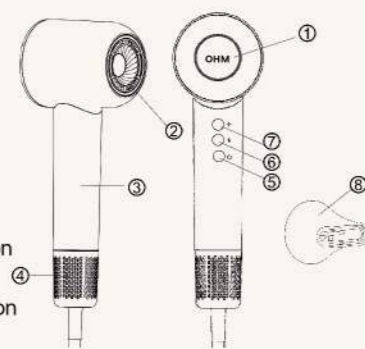

Note: Do not use the dryer without the air filter cover installed to avoid danger.

 
The symbol on the body indicates "Do not use while bathing or showering." The illustrations of the product, accessories, and user interface in this manual are for reference only. Due to product updates and upgrades, the actual product may differ slightly from the illustrations. Please refer to the actual product. Images are for reference only; actual product may vary.

O H M

Live Your Dream

Professional hair results at home


Nozzle Function & Usage

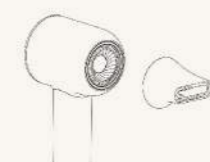

Efficient airflow concentration delivers fast, focused airflow – ideal for precise styling of specific hair sections.

Cleaning and Maintenance

 Warning:
The filter must be cleaned regularly to prevent blockages caused by debris, ensuring smooth airflow.

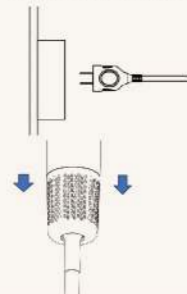

Before cleaning the filter, make sure the hair dryer is turned off and unplugged from the power source.

The air filter cover is secured by a twist-lock mechanism. Hold the handle firmly, twist the air filter cover to the left, then pull it downward to remove it from the handle.

O H M

Live Your Dream

Professional hair results at home



Use a dry, lint-free cloth, soft brush, or toothbrush to remove dust and debris from the air filter cover and the stainless steel mesh surface.

After manual cleaning, plug in the Hair Dryer and power on, press the wind speed button for 3 seconds to activate the self-cleaning function. The hair dryer will auto power off after 10 seconds.



Once cleaning is complete, align the air filter cover with the slot on the handle and insert it. Twist to the right into the lock position.

Warning:
Do not wash the stainless steel mesh with water, as this may cause malfunction.

 
O H M

Live Your Dream

Professional hair results at home

UI Display Icon Guide

1. OHM logo
2. Hot air Icon
3. Warm air Icon
4. Cool air Icon
5. High-Speed Icon
6. Medium-Speed Icon
7. Low-Speed Icon
8. Reverse Cleaning Icon
9. Grip Sensing Icon
10. Ambient light ring – Purple (adaptive heat mode), Blue (cool air), Amber (warm air), Red (hot air). Cycling between these colours (thermocycling heat mode).

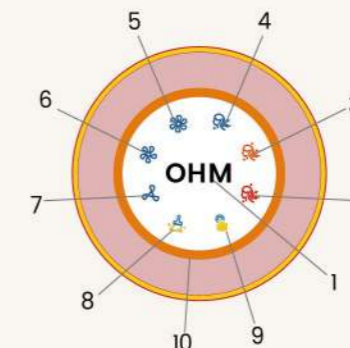

Technical Specifications

Product Name	OHM Hair Dryer
Model	Ultra+
Rated Voltage	220-240V~
Rated Frequency	50-60Hz
Rated Power	1600W
Product Dimensions	257x90x74mm
Certification	UKCA
Warranty	2 Years
Warranty Info	www.myOHM.co.uk

Common Issues & Solutions

Common Issue	Possible Cause	Solution
Device does not turn on	Power cord not plugged in or power is off	Check plug is fully plugged in and power switch is on
	Hair Dryer failure	Contact distributor
Blinking light alarm	Power cord fault	Check air inlet/outlet for blockages; clean and restart. If unresolved, contact distributor for repair
	Air outlet or inlet malfunction	
Heating coil turns red	Heating coil failure	Contact distributor for repair
Heating element fault	Overheat protection activated	
Buttons unresponsive	Button board damaged	Contact distributor for repair
Burning smell during use	Internal component failure	
Power cord overheats	Power cord damaged	
Screen display malfunction	Display board failure	